Instructions for use







Bure Standard MANUAL 56-310 Bure S MANUAL 56-300

Dear User,

Congratulations on obtaining a Bure Walker! These instructions provide important information on how to use the walker and how to maintain it.

All of us here at GATE Rehab Development hope you enjoy using your new product. If you have any comments, questions or points of view, please contact us on +46 (0)371 318 00.

Raising and lowering the frame

Adjust the height by undoing the screws on each side (2 pcs). Raise or lower to the desired height and then lock the screws (2 pcs).



Adjusting the handles

To adjust handles to the desired position; loosen screw, adjust handle, tighten screw.



Left and right adjustment of armrests

The armrests can be adjusted sideways for optimal support; loosen screw, adjust armrest, tighten screw.



Locking castors

Depress the foot brake to set it and lock the castor.



Unlocking castors

Press down on the protruding part of the brake to release it.



Maintenance

Recommended at least once per year.

Check that	Action
General	
The walker feels firm/free from play.	Clean with lukewarm soap solution or alcohol-based cleaning agent (no petroleum products).
The walker does not rattle during manoeuvres.	()
The walker is level and all of its castors are in contact with the floor.	
The walker is not dirty.	
Armrests	
Armrests are intact and clean.	Clean; replace if damaged.
Armrest widening is functional.	Fit lock screws/plates as required.
Handle	
Grips are not damaged/dirty.	Clean with lukewarm soap solution (no petroleum products). Replace handle grips.
Handle adjustment is functional.	Fit lock screws/plates as required.
Height adjustment	
Raising and lowering are functional.	Fit new guide sleeves (in frame) or end plugs (in chrome tubes) as required.
The walker feels stable at maximum settings.	
There is no play between the vertical frame and bottom frame.	Tighten all lock bolts.
Height adjustment clamps lock.	Lubricate the interior bushing on the locking screws with some form of durable grease, or else replace the clamps.
Frame parts	
There is no mechanical damage.	If damage is present, contact GATE's customer services.
There are no scratches.	Touch up as necessary.
End plugs/lower frame fitted.	Fit new end plugs.
Castors/brakes	
Castors roll easily/tread not damaged.	Clean or replace castors. NOTE! Castors are always fixed to the lower frame with thread locker or lock nuts. Do not dismantle the castors; replace the whole castor assembly instead.
The castors are firmly fastened to the lower frame.	Tighten the castor bolt and fit locking nut or use thread locker (depends on model).
Castor brakes functional on all castors.	Replace castor assembly.
Handbrake functional.	Adjust the brake or fit new castors.

General maintenance advice

- Clean the walker and its armrests clean as necessary. Wipe using a soap solution/surface disinfectant.
- The product can be washed in a pressure washer/machine at 60°C for ten minutes. To increase lifetime, avoid aiming highpressure water jets at bearings.
- · Replace damaged parts immediately; must be done by experienced personnel.
- The product is only intended for indoor use.

Technical specifications

Dimensions apply to walkers with 125 mm castors.

Standard Manual

Part No.

56-310

Width

78 cm

Max user weight

150 kg

Lenath

80 cm

Height

90-133 cm

Armrest/internal dimension

25-50 cm

S Manual

Part No.

56-300

Width

66 cm

Max user weight

150 kg

Length

79 cm

Heiaht

90-133 cm

Armrest/internal dimension

30-45 cm

CE marked according to MDD 93/42/EEC.
Tested and approved according to EN-11199-3/2005



Would you like to know more?

Contact us at: Tel: +46 371 31800 Gate Rehab Development AB Industrigatan 2 | SE-333 75 Reftele info@gaterd.com | www.gaterd.com











GATE COLLECTION