

# Instructions for use



DIGITAL

# Bure<sup>TM</sup> Walker

**GATE**

REHAB DEVELOPMENT AB

Bure Standard EL 56-312T

Bure S EL 56-302T

Bure Low EL 56-321

Bure Low S EL 56-321-S

## Dear User,

*Congratulations on obtaining a Bure Walker! These instructions provide important information on how to use the walker and how to maintain it.*

*All of us here at GATE Rehab Development hope you enjoy using your new product. If you have any comments, questions or points of view, please contact us on +46 (0)371 318 00.*

### Raising and lowering the frame

Adjust the height with the aid of the remote control UP and DOWN arrows.




### Adjusting the handles

To adjust handles to the desired position; loosen screw, adjust handle, tighten screw.



### Left and right adjustment of armrests

The armrests can be adjusted sideways for optimal support; loosen screw, adjust armrest, tighten screw.

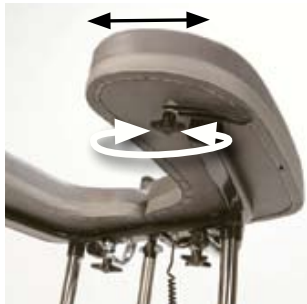

## Locking castors

Depress the foot brake to set it and lock the castor.



## Unlocking castors

Press down on the protruding part of the brake to release it.



## Control box wiring



Remove the control box cover to make the connections as described below. Use a screwdriver or similar; refer to the special labels on the control box.

1. Socket for the raise/lower actuator.  
NOTE! Make sure that plugs are connected to the correct sockets otherwise the actuators can be damaged.
2. Remote control socket.
3. Battery terminal socket.
4. Plug socket. NOTE! The plug must ALWAYS be connected to the control box for IP protection to be valid.

## Battery charging

- Connect plug to 230V wall socket. Charging begins automatically and the battery LED flashes green.
- Make sure the battery is fully charged before using for the first time. It takes around 25 h to fully charge the battery.
- We recommend that the battery plug be removed from the control box if the product will be out of use for an extended period (more than one week) or if the battery is switched off by means of the ON/OFF switch. This eliminates the risk of disabling the battery as the control box always uses a small quantity of electricity even when the walker is not in use.

## LEDs on control box and battery

- Control box – green light when power is available from battery/mains socket.
- Battery:
  - The LED flashes green during charging.
  - ON/OFF: To use the product, press ON.
  - The green lamp will begin to flash.
  - Use the OFF button (hold down for 5 s) to switch off the battery if the product will not be used for an extended period.
  - The LED will show a constant green light when the battery is fully charged.
  - When the battery is in normal state/in operation, the LED flashes green at REGULAR intervals, namely 0.5 s ON, 4 s OFF.
  - When the battery requires charging (remaining charge <25%) the LED will flash orange/red at REGULAR intervals, namely 0.5 s ON, 4 s OFF.



**NOTE!** The battery has an in-built device that automatically switches it off when remaining charge is <20%. The LED is then extinguished. The battery must now be fully charged before the electronics can be used again.

# Maintenance

Recommended at least once per year.

| Check that   | Action   |
|--|--|
| <b>General</b>   |  |
| The walker feels firm/free from play.  | Clean with lukewarm soap solution or alcohol-based cleaning agent (no petroleum products).   |
| The walker does not rattle during manoeuvres.  |  |
| The walker is level and all of its castors are in contact with the floor.  |  |
| The walker is not dirty.   |  |
| <b>Armrests</b>  |  |
| Armrests are intact and clean.   | Clean; replace if damaged.   |
| Armrest widening is functional.  | Fit lock screws/plates as required.  |
| <b>Handle</b>  |  |
| Grips are not damaged/dirty.   | Clean with lukewarm soap solution (no petroleum products).<br>Replace handle grips.  |
| Handle adjustment is functional.   | Fit lock screws/plates as required.  |
| <b>Battery</b>   |  |
| Check that the charging cable is connected to the control box.   | Fit new charging cable; this must always be connected to the control box (IP65 protection).  |
| Check that the remote control is connected to the control box.   | Connect or fit new remote control as required.   |
| Check that connections are made according to the wiring diagram.   | Refer to the wiring diagram in the Technical manual.   |
| Check that the battery, actuators and control box are not loose.   | Tighten; replace with new fasteners as required.   |
| <b>Height adjustment</b>   |  |
| Raising and lowering are functional.   | Fit new guide sleeves (in frame) or end plugs (in chrome tubes) as required.   |
| The walker feels stable at maximum settings.   |  |
| There is no play between the vertical frame and bottom frame.  | Tighten all lock bolts.  |
| Height adjustment clamps lock.   | Replace clamps.  |
| The electric actuator fitting must be free from play.  | Tighten the attachment fitting concerned; replace bolts/lock nuts as necessary.  |
| Height adjustment via remote control is functional. The electric actuator must run smoothly at a constant speed. | Check that the battery/remote control/actuator are connected in accordance with the wiring diagram. Charge the battery. Contact customer services.                                       |
| <b>Frame parts</b>   |  |
| There is no mechanical damage.   | If damage is present, contact GATE's customer services.  |
| There are no scratches.  | Touch up as necessary.   |
| End plugs/lower frame fitted.  | Fit new end plugs.   |
| <b>Castors/brakes</b>  |  |
| Castors roll easily/tread not damaged.   | Clean or replace castors.<br>NOTE! Castors are always fixed to the lower frame with thread locker or lock nuts. Do not dismantle the castors; replace the whole castor assembly instead. |
| The castors are firmly fastened to the lower frame.  | Tighten the castor bolt and fit locking nut or use thread locker (depends on model).   |
| Castor brakes functional on all castors.   | Replace castor assembly.   |
| Handbrake functional.  | Adjust the brake or fit new castors.   |


# General maintenance advice

- Clean the walker and its armrests clean as necessary; Wipe using a soap solution/surface disinfectant.
- The product may be cleaned in a tunnel washer or similar as electrical systems have IP65 protection. However, the product is not corrosion proof which means washing by machine may reduce its lifetime.
- Replace damaged parts immediately; must be done by experienced personnel.
- The product is only intended for indoor use.

# Technical specifications

Dimensions apply to walkers with 125 mm castors.

|  |   |
|--|---|
| <b>Standard EL</b><br><b>Part No.</b><br>56-312T<br><b>Width</b><br>78 cm<br><b>Max user weight</b><br>150 kg<br><b>Length</b><br>80 cm<br><b>Height</b><br>90-130 cm<br><b>Armrest/internal dimension</b><br>25-50 cm | <b>S EL</b><br><b>Part No.</b><br>56-302T<br><b>Width</b><br>66 cm<br><b>Max user weight</b><br>150 kg<br><b>Length</b><br>79 cm<br><b>Height</b><br>90-130 cm<br><b>Armrest/internal dimension</b><br>30-45 cm           |
| <b>Bure Low EL</b><br><b>Part No.</b><br>56-321<br><b>Width</b><br>78 cm<br><b>Max user weight</b><br>150 kg<br><b>Length</b><br>80 cm<br><b>Height</b><br>75-100 cm<br><b>Armrest/internal dimension</b><br>25-50 cm  | <b>Bure Low S EL</b><br><b>Part No.</b><br>56-321-S<br><b>Width</b><br>66 cm<br><b>Max user weight</b><br>150 kg<br><b>Length</b><br>79 cm<br><b>Height</b><br>75-100 cm<br><b>Armrest/internal dimension</b><br>30-45 cm |

 CE marked according to MDD 93/42/EEC.  
Tested and approved according to EN-11199-3/2005



**WE DO BETTER.**

Would you like to know more?

Contact us at:  
Tel: +46 371 31800  
Gate Rehab Development AB  
Industrigatan 2 | SE-330 21 Reffele  
info@gaterd.com | www.gaterd.com



GATE COLLECTION